


## Trusted Platform Module (TPM) Firmware Update Instructions

### Intel® NUC Kit NUC5i5MYHE and Intel® NUC Board NUC5i5MYBE

<b>Note</b>	<p>This firmware update is for the TPM firmware only. The BIOS version isn't updated.</p> <p>The TPM firmware update clears all data in the TPM, including BitLocker passwords. If you're using BitLocker:</p> <ul style="list-style-type: none"><li>• Disable or suspend BitLocker before updating the firmware.</li><li>• Make sure you have a copy of the recovery key or you may not be able to log back in to the device.</li></ul>
-------------	--

#### To check your TPM firmware version:


1. In Windows, press the **Windows key + R**.
2. Type **tpm.msc** and press **Enter**.
3. Check the **TPM Manufacturer Information** section:
  - If the Manufacturer Version is 5.4 or earlier, the TPM firmware needs to be updated.
  - If the Manufacturer Version is 5.6 or later, the TPM firmware is up to date.

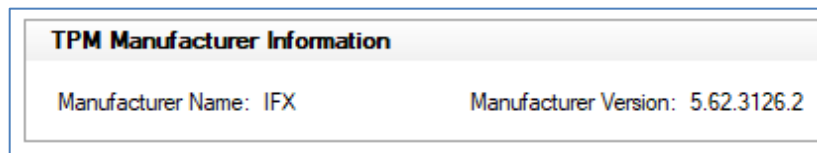


#### To update the TPM firmware:

1. Download the **NUC5i5MY-TPM-Firmware-Update.bio** to a USB flash drive.
2. Plug the USB flash drive into a USB port on the Intel NUC and start it.
3. Press **F7** during boot to open the BIOS update screen.
4. Browse to the USB flash drive and select **NUC5i5MY-TPM-Firmware-Update.bio**

5. Confirm you want to update the BIOS.

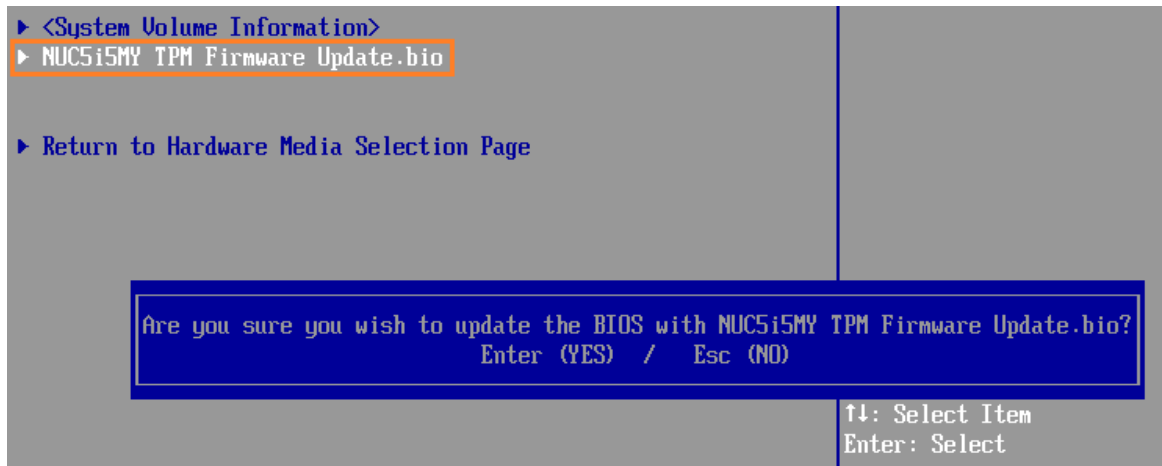

6. On the warning screen, select Y to continue with the update.

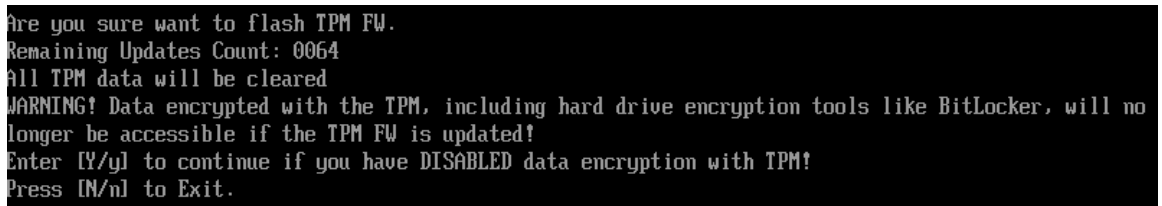

<b>Note</b>	If the TPM firmware is already up to date, the following message appears:  <b><i>Current TPM FW is v5.62 or above. No FW update required. System will reboot in 20 seconds.</i></b>
-------------	---

7. The following message appears when the firmware update is complete:

***TPM FW updated successfully. System will reboot in 20 seconds.***