



# Instructions on how to download the NVIDIA\* Graphics Driver for Intel® NUC 11 Enthusiast - NUC11PHKi7C

<January 2021>

Both the [Intel Graphics driver](#) and the NVIDIA Graphics driver should be installed.

To install NVIDIA Graphics driver:

## Step 1:

Navigate to <https://www.nvidia.com/en-us/geforce/drivers>.

## Step 2:

### Option 1:

If you want NVIDIA to notify you and download new graphics driver updates for you, select, **Download Now** under, *Automatic Driver Updates*.

### Option 2:

If you prefer manual driver installation, under, *Manual Driver Search*, select the following options for your Intel® NUC 11 Extreme - NUC11PHKi7C:

- **Product Type:** GeForce
- **Product Series:** GeForce RTX 20 Series
- **Product:** GeForce RTX 2060

Then select Start Search.