


# **Intel® NUC M15 (LAPRC) Laptop Kit – Driver installation guide**

---

**July 2022**

After installing Windows® 10 or Windows\* 11, install the drivers in the order below.


1. **Chipset:** double-click, **SetupChipset.exe**.
2. **ME:** double-click, **SetupME.exe**.
3. **Graphics:** double-click, **Installer.exe**. Restart.
4. **Serial IO:** double-click, **SetupSerialIO.exe**.
5. **Audio\_Package:** Right-click, **InstallPackage.bat** and select, *Run as administrator*.

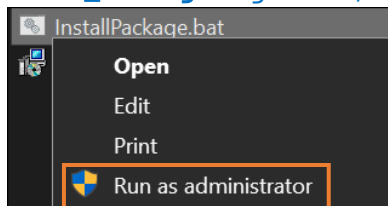

**Note:** It may take over a minute for the installation to finish. After installation the system will automatically restart.

6. **HID Event Filter:** double-click, **Setup.exe**. Restart.
7. **Integrated Sensor Hub (ISH):** double-click, **SetupISS.exe**.
8. **Processor Power Management (PPM):** double-click, **PPM-ADL-preview-XX**.
9. **Dynamic Tuning Technology (DTT):** double-click, **lpfDtt\_XX\_Install.exe**
10. **Intel Context Sensing Service (ICSS):** Right-click both .inf files and select Install. If using Windows 11\*, right-click the .inf files > Show More Options > Install.
11. **iTouch THC Base Driver:** Right-click on, the .inf file and select Install. If using Windows 11\*, right-click the .inf files > Show More Options > Install.
12. **Wireless:** double-click, **WirelessSetup.exe**. If necessary, restart.  
OR  
Install using the command line.

Navigate to the Wireless folder, select, **File > Open Windows PowerShell > Open Windows PowerShell as administrator** (CMD can also be used). Then type: **WirelessSetup.exe -fcode**

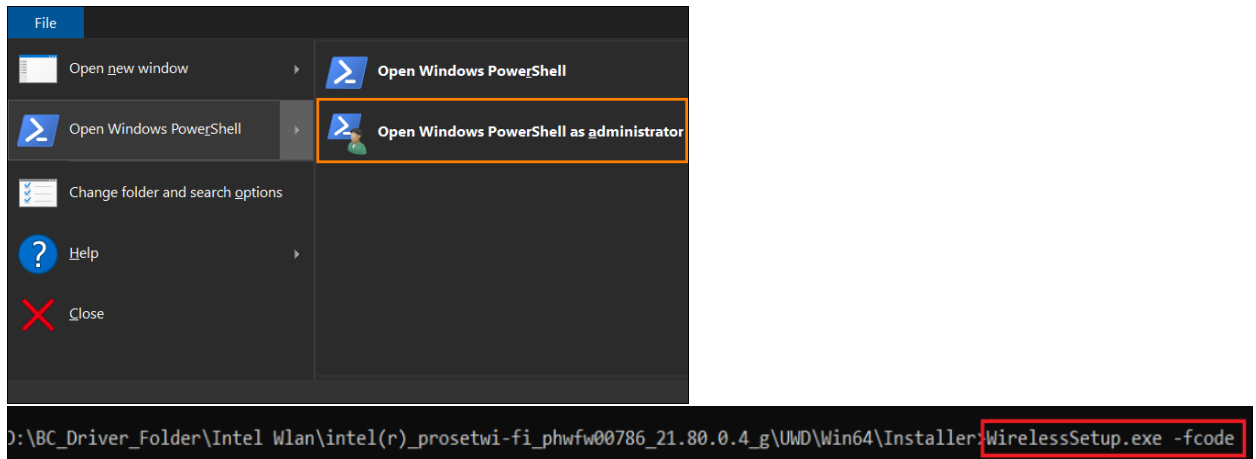

13. **Bluetooth:** double-click, **Intel Bluetooth.msi**, select, **Typical**.

14. **Camera:** there are 7 .inf files to install. Install the files in the order below by right clicking each one and selecting *Install*



15. **Thunderbolt™:** double-click, **Thunderbolt™ Software Installer.exe**. Restart. If using Windows 11\*, it is not necessary to install the Thunderbolt driver.

16. **GNA:** right-click on, **gna.inf** and select Install. You will get the same pop-up window as in step 10 (if using Windows 10)

17. **Intel Connectivity Performance Suite (ICPS):**

- a. Right-click on, **ICPSComponent.inf** and select Install.
- b. Navigate to the Drivers > ICPSExtension.
- c. Right-click on, **ICPSExtension.inf** and select Install.

18. **Uniwill Service:** Right-click on, **Install-UniwillService.bat**, and select, **Run as administrator**.

19. **Touchpad\_Firmware\_Update:** right-click, **Install.bat** and select, *Run as administrator*.